

Hiker Pro Water Microfilter

Hiker Pro Replacement Cartridge



EN

DE

FR

NL

DK

SWE

NOR

FIN

IT

ESP

POR

Thank you for choosing the Katadyn Hiker Pro Water Microfilter

The Katadyn Hiker Pro meets industry standards for reduction of bacteria (99.9999% *Klebsiella terrigena*) and protozoan cysts (99.9% *Giardia* and *Cryptosporidium*). Its compact and lightweight design is easy to use and essential equipment for camping, back-packing and trekking.

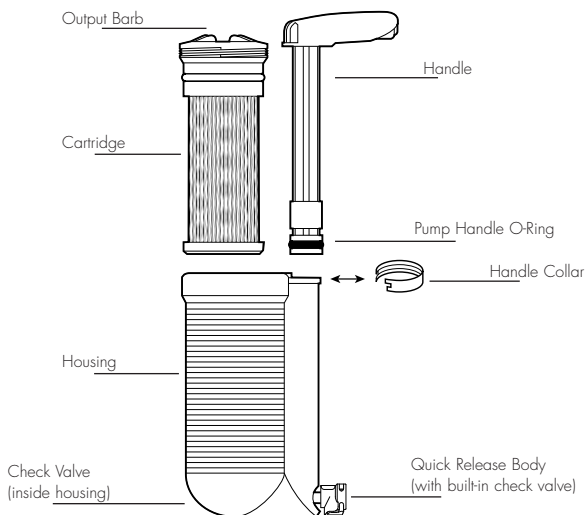


Figure 1-1

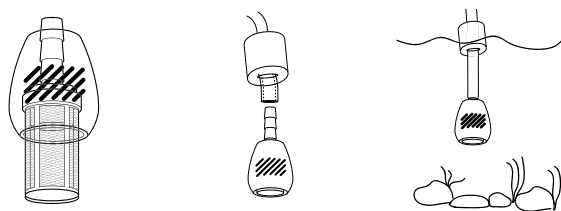


Figure 1-2

KEY COMPONENTS

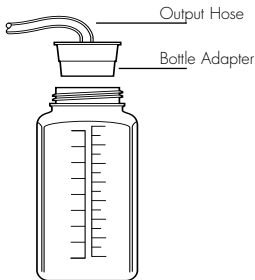


Figure 2-1

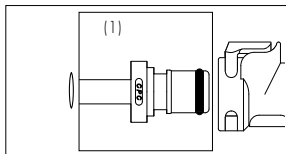


Figure 2-2

Prefilter

The modular prefilter (Figure 1-2) is effective in still and running water. It consists of two components: a strainer and a weight. The prefilter is important because it prevents large particles (larger than 130 microns) from entering the water system. See Field Performance Tips for helpful hints.

EasyFill™ Bottle Adaptor

The EasyFill Bottle Adaptor (Figure 2-1) conveniently attaches directly to different sized water containers.

Hydration Bladder Compatible

Your Katadyn Hiker Pro includes a connector (1) that allows the output hose to attach to the quick connect fitting built-in to many hydration bladders such as Nalgene, Jansport, etc. This convenient feature allows easy filling of hydration bladders. See illustration (Figure 2-2) for installation.

PRODUCT SET-UP

The Hiker Pro requires minimal set up. For best results, try out the Hiker Pro before first field use to familiarize yourself with its operation.

1. Connect Hoses

Remove the plastic cap from the output barb; retain for storage. Connect input hose (hose with prefilter) with quick connect insert to quick release body at base of pump housing. Connect output hose to output barb on top of cartridge. Connect the EasyFill Bottle Adaptor to the end of the output hose. (Figures 1-1, 1-2, 2-1) For use with hydration bladder, connect hydration connector to the end of the output hose. (Figure 2-2)

2. Flush System

Important: Before first use, flush system by pumping approximately 1 liter of water through the unit to remove harmless carbon dust. Slightly discolored water is normal when flushing. See following section on Normal Operation on how to filter water.

NORMAL OPERATION

1. Place input hose in untreated water source. Adjust the float to keep prefilter off the bottom and away from sediment.
2. Insert the EasyFill Bottle Adaptor into a clean water container or connect hydration connector to bladder*. (Figure 2-1, 2-2)
3. Make sure the hoses are not kinked. Begin pumping the handle in a slow, steady manner. Approximately 48 strokes per minute equals 1 liter of water.
4. After filling water container with filtered water, remove bottle adaptor/hydration connector from container/bladder and prefilter from water source. Continue pumping to remove remaining water from pump body.
5. Store unit in the carry bag. To prevent the possibility of cross contamination, remove the output hose and EasyFill Bottle Adaptor and store separately in the re-sealable bag inside the carry bag.

*Note: Before each use, flush and discard a small amount (5 – 10 strokes) of water to remove stale taste.

FIELD PERFORMANCE TIPS

The Katadyn Hiker Pro is designed to remove bacteria and protozoan cysts such as Giardia and Cryptosporidium. To extend cartridge life, always use the best water source available. Keep the intake prefilter clean and off the bottom. In heavy sediment conditions, wrap a coffee filter or bandanna around the intake prefilter. Where possible, place untreated water in container and wait for sediment to settle out until water appears clear - then filter from water above the sediment.

Maintain your Katadyn water system to keep it operating smoothly.

1. If handle is hard to push:

Lubricate pump handle o-ring. Silicone lubricant is provided with your new unit. Remove handle collar and handle. (Figure 1-1) Clean excess build-up from black rubber o-ring on bottom of handle. Place a small amount of silicone lubricant all the way around the o-ring. Re-assemble.

Clogged cartridge. A clogged cartridge requires replacement. As a temporary solution in the field, remove the cartridge and swish it around in water. See also Hiker Pro removable Filter Protector. Take care that untreated water does not contact the cartridge output barb. If flow is not restored, replace cartridge. See Cartridge Installation for cartridge removal.

2. If unit pumps easily, but no water flow:

Make sure prefilter is submerged.

Make sure that hoses are not blocked or pinched.

Clean check valve. Occasionally, sediment may enter pump body and prevent check valve from operating properly. This may cause lack of water draw. The check valve can easily be cleaned to restore maximum water output. Remove the cartridge. Fill the pump housing half way with water, swirl around and discard water. Fill the housing half way with water again and reinstall cartridge. Pump slowly to get water started and resume normal pump rate when flow has begun.

3. Prefilter: Rinse the prefilter in water to remove any particles that may be caught in the strainer. For a more thorough cleaning, remove the prefilter from the input hose and clean with water and a soft brush. Reassemble. Apply a small amount of silicone lubricant to the strainer barb to ease assembly. (Figure 1-2)

For use without the weight. The prefilter is functional with or without the weight (we recommend using with the weight). To use without the weight, remove the strainer barb from the input hose. Re-assemble without the weight.

4. **Storage:** Your Katadyn water system comes with a carry bag for storage. To prevent the possibility of cross contamination, remove the output hose and EasyFill Bottle Adaptor and store separately in a re-sealable bag inside the carry bag.

LONG-TERM STORAGE (AFTER YOUR TRIP IS OVER)

Disinfect your microfilter before storage to prevent microbiological growth within the pump.

1. Fill a liter container with tap water and add 2 tablets of Micropur Forte DCCNa or Micropur MP1. (Do not use Micropur Classic.)
2. Place prefilter into solution.
3. Pump entire amount of solution through unit (into sink or container).
4. Remove prefilter from the solution and continue pumping another 5 to 10 strokes to remove remaining water from the pump body and hoses.
5. Remove cartridge and allow to dry.
6. Wrap hoses around body and store in carry bag.

Note: When removing unit from long-term storage, flush the system with one liter of water to remove any stale tasting water.

CARTRIDGE CAPACITY

Cartridge capacity depends on water quality. The Katadyn Hiker Pro was tested at 750 liters (without filter protector) and found effective for removal of bacteria (*Klebsiella terrigena*) and protozoan cysts (*Giardia* and *Cryptosporidium*). For maximum performance, cartridge should be replaced after 750 liters or when the unit becomes hard to pump.

CARTRIDGE INSTALLATION

Replacement cartridges are available from the dealer where you purchased your Hiker Pro.


1. Remove output hose from cartridge output barb. Grasp the top of the Hiker Pro cartridge and turn counter clockwise. If cartridge removal is not possible by hand, the handle shaft will function as a cartridge removal tool:
Remove the handle collar and handle. Locate one of the deep grooves on either side of the handle shaft. Lay the handle across the filter top and insert two of the "fins" on top of the filter into one of the grooves of the handle shaft. Hold the handle shaft in place firmly with the palm of your hand. Using the handle shaft for leverage, apply even pressure and gradually turn the cartridge counter clockwise. Use caution so that handle shaft does not slip and cause damage. Discard used cartridge in trash receptacle.
2. Rinse inside of housing by swishing with clear water (non-filtered water is ok). Discard water. Wipe inside of housing and housing threads with soft cloth to remove sediment.
3. Remove new cartridge from packaging.
4. Insert new cartridge into housing and tighten clockwise. Note - Apply silicone lubricant to cartridge o-ring before re-assembly to ease cartridge removal in the future.
5. Re-attach output hose to cartridge output barb. (Figure 1-1)
6. Flush cartridge by pumping and discarding the first liter.

HIKER PRO REMOVABLE FILTER PROTECTOR

The Filter Protector is a cleanable screen that covers the Hiker Pro cartridge. The Hiker Pro does not require frequent cleaning, however using the Filter Protector will extend the life of your cartridge. It may be used continually or when source water contains suspended particulate or dirt.

Cleaning Filter Protector

If your Hiker Pro becomes difficult to pump, clean the Filter Protector. To clean, carefully remove the netting and Filter Protector from cartridge. Place Filter Protector on flat surface and clean with damp sponge or fabric. Rinse with water and reinstall. It is also recommended to clean the filter cartridge by holding it by the top and "swishing" it in water. This will remove most particles that may have collected on the filter surface.

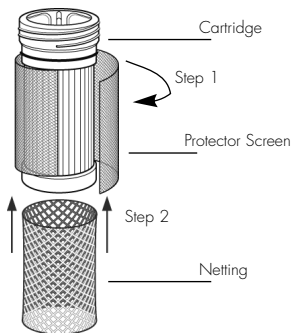

Installing Filter Protector

Wrap protector screen around cartridge (there will be approximately a 2" overlap) and hold in place. Slip the flexible netting over the cartridge. Adjust filter protector screen and netting so they are positioned evenly.

The use of the Filter Protector will extend cartridge life to up to 1,150 liters (300 gallons), depending on water quality.

HIKER PRO QUICK CONNECT HOSE FITTINGS

The Hiker Pro includes quick-connect fittings for both input and output hoses. The fittings make hose handling quick and easy. The output hose quick-connects may also be used to connect directly to the drink hose (1/4" diameter only) of a hydration pack or bladder allowing quick filling without opening pack.

Input Hose Set-up Instructions (required)

Connect black hydration connector insert to the end of input hose (opposite end of prefilter). Connect input hose insert to quick release body at base of pump housing.

Output Hose Quick Connect Set Up Instructions (optional)

Option #1:

This configuration is ideal for easy removal and storage of output hose to avoid cross contamination. Output hose may easily be stored inside the re-sealable bag provided.

1. Install output hose and cut hose approximately 2-4 inches from filter cartridge.

2. Attach white quick connect insert (B) to the "short" section of hose. Attach white quick connect body (A) to the "long" section of the cut hose. Connect them together. (Figure 3-1)
3. If a direct connect to hydration bladder is desired, install the second white connector (C) to the end of the output hose. This will match with many popular hydration systems. (Figure 3-2)

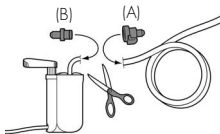


Figure 3-1




Figure 3-2

Option #2:

This configuration is ideal for pumping filtered water directly into hydration packs (such as Camelbak). It allows quick filling without removing pack or bladder.

Note: Ensure quick connect fittings are correct size for your hydration pack drink hose (1/4" inside diameter) before proceeding to Step 1.

1. Cut hydration pack drink hose at desired length (approximately 4 inches from end of drink hose). See Figure 4-1
2. Connect white body (A) to long section of drink hose that attaches to hydration bladder.
3. Connect white insert (B) to short section of drink hose that attaches to bite valve.
4. Connect the second white insert (C) to end of water filter output hose.
5. To fill bladder, connect white insert (C) on output hose to white body (A) on drink hose. Fill. Reconnect bite valve. See Figure 4-2

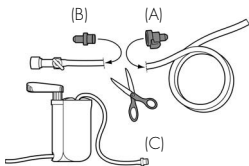


Figure 4-1

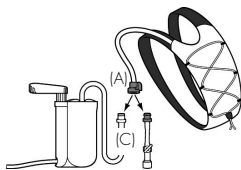


Figure 4-2

WHEN YOU TRAVEL ABROAD, CAMP OR BACKPACK ...

... you run a risk of illness ranging from the inconvenience and discomfort of diarrhea to more serious illnesses caused by protozoan cysts (i.e., Giardia, Cryptosporidium), viruses and bacteria.

The microorganisms that cause these diseases are often found in the food and water you consume. Lakes, streams and the local water supply may be contaminated.

To minimize the risk of contracting these illnesses, we suggest that you consult with your physician, state health department or travelers' clinic 4-6 weeks before you depart.

And while you are traveling...

- Make sure that prepared food is thoroughly cooked.
- Select non-cooked foods (fruits, nuts, etc.) that have intact shells or skins, and clean your hands before peeling the food
- Wash your hands with soap and water thoroughly and often, especially before you eat. Filter all drinking water with your Katadyn Hiker Pro Water Microfilter.

The Katadyn Hiker Pro Microfilter is an essential piece of outdoor equipment. We hope it makes your outdoor experience more enjoyable. For questions or suggestions, please contact us at +41 44 839 21 11.

PRODUCT REGISTRATION

Please take a moment to register your new Katadyn product by completing the short product registration form online at www.katadyn.com/productregistration. The information you provide will enable us to better serve you with products developed to meet your needs and interests. Register your Katadyn product online and you will be automatically entered into a drawing to win a free Katadyn product.

LIMITED WARRANTY

Your Katadyn Hiker Pro Microfilter is warranted for two (2) year from the date of purchase against defects in materials and workmanship. Should your Katadyn Hiker Pro prove defective within this period, return it to the Katadyn retailer from whom it was purchased. If you do not receive a satisfactory resolution, contact Katadyn Consumer Relations at +41 44 839 21 11 for service assistance. Katadyn, at its discretion, will replace or repair the damaged item. Please retain your purchase receipt as proof of date purchased. This warranty gives you specific legal rights and you may have other legal rights which vary from state to state.

INTERNATIONAL CONTACT

Katadyn Products Inc.

Pfäffikerstrasse 37

8310 Kempthal, Switzerland

Phone: +41 44 839 21 11

info@katadyn.ch

www.katadyn.com

KATADYN HIKER PRO TRANSPARENT - best selling microfilter in the US Outdoor Market

PRODUCT CHARACTERISTICS

Technologie: Pump filter, AntiClog™ pleated cartridge made with 0.2 micron glassfiber. Includes activated carbon granules

Effect: Removes bacteria, protozoa, cysts, algae, spores, sediments. Reduces bad tastes and odors.

Output: Approx. 1 l/min

Capacity: Up to 1150 litres (300 gallons) depending on water quality

Weight: 233 gr

Dimensions: 7,6 x 16,5 x 6,1 cm

Guarantee: 2 years

Material: Plastic, silicone

Accessories: Prefilter, removable filter protector, 2 quick connect hose sets, Easy Fill™ bottle adaptor and carry bag

Article No.: 8019670

Series: Backcountry



FACTS

- Transparent design so users can follow the flow of the water and the filtering process.
- Chosen "the unrivaled best for field use" by US Backpacker Magazine.
- Chosen easiest to use by 4 out of 5 US retail experts.
- Large filter surface of 271 cm² (107 square inches) makes pumping easy.
- Approximately 48 strokes per minute to provide 1 liter of water.
- Connects to most popular water bottles.
- Compatible with hydration systems.
- The lowest priced water filter pump in its class.
- For clear and occasionally turbid water.
- For longer trips, say several months, we would recommend ceramic filters like the Pocket or Combi.

PRODUCT CHARACTERISTICS > BENEFITS

- Transparent design > shows filtering process
- Very large filter surface > fast output and ease of use because of minimal resistance while pumping
- Active carbon core > reduces unpleasant tastes and odors from the water
- Cleanable filter protector > extends filter life in challenging conditions
- Quick connect fittings > for easy installation/removal of input and output hoses
- Small pre-filter on in-hose > protects filter cartridge life in turbid water
- Compact design and easy operation > to fit in any backpack or travel bag
- Easy Fill™ Bottle Adaptor > attaches directly to a drinking bottle

SHORT PROFIL

Very convenient filter. Fast and easy to use pumping mechanism. For 1 to 2 persons. Ideal for backpacking and trekking.

KATADYN HIKER PRO TRANSPARENT - best selling microfilter in the US Outdoor Market

CUT MODEL



Katadyn reserves the right to modify product characteristics